



## PREMIUM AFTERMARKET WIND DEFLECTORS

### Renault 19 wind deflector fitting instructions

Product No: 30.00.01.01



#### What is in the box

- 1 x Wind deflector
- 4 x Brackets
- 2 x Rotation knobs
- 2 x Bolts
- 4 x Washers
- 2 x Plastic caps
- 1 x Installation manual





### STEP 1

Open the top and fold the front seats forward then remove the screw that holds the doorseal.



### STEP 2


Remove the door seal and pull the side panel forward,





### STEP 3

Loosen the the bolt behind the side panel. .

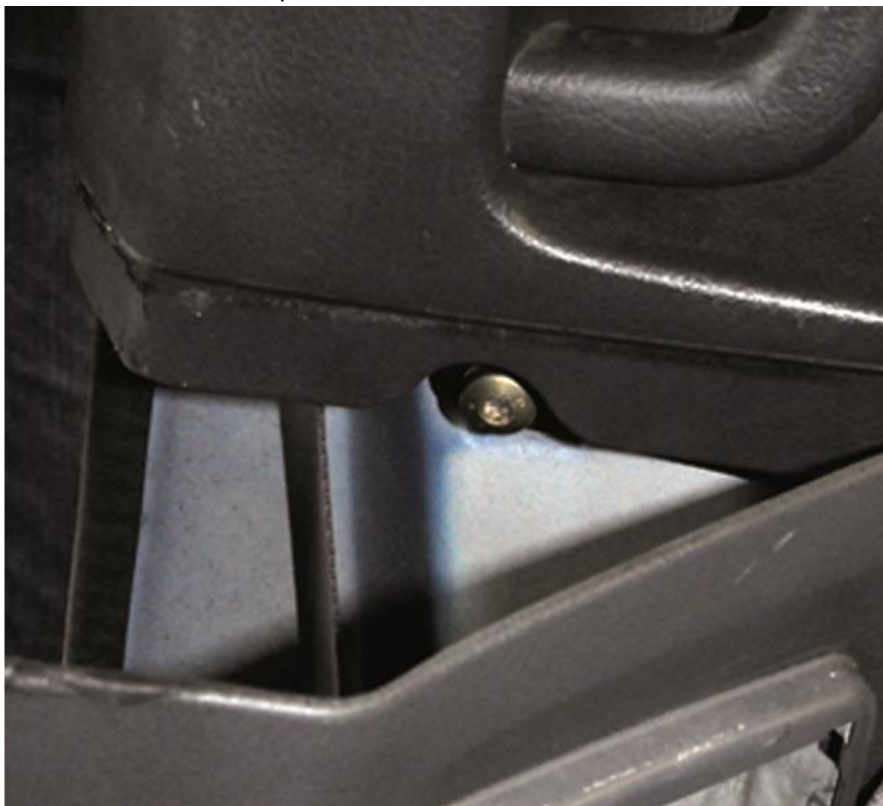



### STEP 4

Attach the long bracket behind the bolt and tighten the bolt. Reattach the side panel.





### STEP 5

Attach the small brackets to the wind deflector frame using the supplied bolts and washers.



### STEP 6

Attach the wind deflector frame to installed brackets using the supplied rotation knobs.







### STEP 6

Attach the Velcro strip to your carpet under the rear seats.

