


## Wind deflector Fitting Instructions for Triumph Spitfire

The wind deflector comes with the following parts:-

- 2 x Wind deflector brackets
- 2 x Bolts
- 4 x Washers
- 2 x Plastic caps

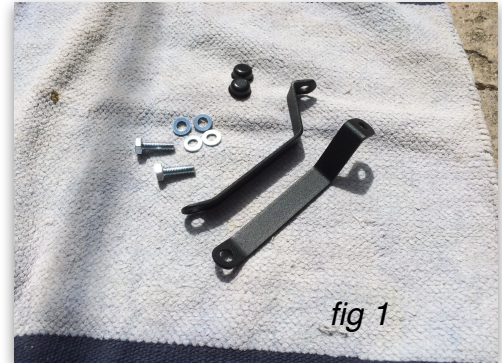

### STEP ONE

Ensure the hood is in the open position (fully flat) and locate the Hood frame brackets on either side of the vehicle.

These brackets are attached to the vehicle by 3 (Three) bolts. Loosen and remove the middle bolt from both of the hood frame brackets.

You may find this easier with the seats pushed forward  
See fig 2



### STEP TWO

Once the middle bolt has been removed, attach the supplied wind deflector bracket to the hood frame bracket using the bolt that was removed, DO NOT TIGHTEN AT THIS STAGE.

Repeat this for the other side. (Notice that the 90 degree angle end of the supplied bracket is attached to the hood frame bracket, see fig 3.)



### STEP THREE

Once both brackets are fitted in place, offer up the wind deflector between the attached brackets. This may be easier with another person to assist.

Using the two bolts and washers supplied, fasten the wind deflector to the newly attached brackets, again do not tighten yet.

Find the optimum position for the wind deflector. Do not have it too low as the deflector would be ineffective.

Once you have positioned it correctly, tighten all bolts but be careful not to over tighten.

Attach the plastic caps to the end of the supplied bolts.

